

SEARCHING

From front panel or remote.

➤ Press search button.

SEARCHING is highlighted
Press ENTER

SEARCHING is highlighted
Press ENTER

SEARCHING is highlighted
Press ENTER

- CALENDAR is highlighted
Press ENTER.

- DEVICE is highlighted
Press ENTER.

- OK is highlighted
Press ENTER.

➤ Date and Time Menu is displayed.

- Select Date using left or right cursors and press ENTER.

- Select the Hour using left or right cursors and press ENTER.

- Select the Minute using left or right cursors and press ENTER.

Note: To step backwards through the menu press EXIT.
To return to Live View from play back press STOP.

BACKING UP TO CD-R

(Approximately 15-20 minutes of recording will fit on a CD)

(Rewritable's (CD-RW) not recommended as they require formatting)

- Insert CD-R (MULTI SPEED).

➤ From front panel or remote.

- Press SETUP

SETUP is highlighted Press ENTER

SETUP is highlighted Press ENTER

SETUP is highlighted Press ENTER

- Select BACKUP icon (using direction cursors),
press ENTER

- Select FROM and TO date and time, (up and down
cursors to move, side cursors to change)

- Press ENTER or down cursor to select cameras.

- Select cameras using direction cursors to move and
the ENTER button to select or deselect.

- Press down cursor to select BACK UP device, then
press ENTER.

- BACK UP is highlighted, press ENTER
(Back up will proceed)

- When complete press EXIT to return to live viewing.